



Caring for your new TP4 Pod.

Contents:

Operation

Care & Maintenance

Warranty

Contact Details

Last update: December 2017

Operation

Door

The door is operated by a latch handle, located on the front of the glass door. This may also include a lock where specified in order to secure the pod as required. To open, depress the handle then pull gently towards you. To close, gently guide the door back to the closed position and allow the latch to locate in to the frame to secure the door in the closed position.

LED Lighting

The LED lights are recessed within the ceiling and will not require routine maintenance.

The lights are operated by means of a concealed micro sensor, detecting movement within the pod which will activate the lights. Following the pod being vacated the lighting will automatically switch off.

Airflow

The airflow unit is concealed within the ceiling and circulates ambient air from outside of the pod. It is activated by the concealed micro sensor in a similar way to the lighting. Discreet slots will allow for air to circulate out of the pod to retain air quality.

Power

As standard each pod is powered via a 5 metre starter lead which terminates with a standard power plug. This lead is supplied with each pod and will plug in to a nearby power outlet. A data input socket will also be provided as standard, adjacent to the power input.

As standard the power column is supplied with 2 power outlets and 2 CAT6 data outlets. You may have additional power points, VGA, HDMI or other ports located within the pod, depending on what has been specified.

Perch Seat

A perch seat is provided opposite to the table in some cases, to allow the user to stand against an upholstered profile. This is not designed to carry the weight of a user and as such should not be sat on as a load bearing component.

Integral Floor

Where your TP4 has been provided with an integral plinth/floor, there is a concealed levelling system contained within this to allow for installation on uneven floor surfaces. Underneath the carpet tiles is access to these five levelling points which will be set on installation.

Electrical Components

The power & USB charge units are designed to charge mobile/small devices such as tablets, mobile phones etc. and not larger appliances such as vacuum cleaners.

Care & Maintenance

To ensure maximum life expectancy from your new Boss POD it is important that it is periodically cleaned and maintained. Following the advice in this care guide will ensure your product retains its functionality and appearance for much longer.

Aluminium Frame

The natural beauty and lustre of Anodising has been proven to stand the test of time. In 10 years' time; with proper maintenance; your product will look as good as the day it was installed.

Regularly maintain by washing down Anodised aluminium with warm water containing a suitable wetting agent or with mild soap solution.

More difficult grime deposits may require the use of a mild abrasive such as pumice powder and water. Where greasy deposits are concerned, cleaning may require a soft cloth dipped in white spirits.

It is necessary to thoroughly rinse with water after cleaning especially where crevices are present to ensure removal of all residues.

Glass Panels

Always clean with a good proprietary Glass Cleaner.

Upholstery

Attend to spills and stains quickly while they are still fresh. Use a damp cloth to mop up spills before they have time to soak in. Stains can be removed using an upholstery shampoo.

Wood Panels

Where wood panels are installed, these are lacquered and should only be cleaned with a soft cloth. Do not use wax or oil based cleaning products.

Electrical Components

Connecting and modifying wiring should only be carried out by a qualified electrician, and only once the power source has been isolated.

Cables and components within this pod will not require regular maintenance and advice should be sought from Boss Design before attempting to change or access any parts of the electrical installation.

Warranty

Boss Design warrant the original purchaser of a Boss Design pod system from the date of delivery – only when installed is carried out by our trained network of approved installers.

A five year warranty covers all structural elements of the pod and is subject to normal conditions of use and care.

This structural guarantee includes items such as:

Integral structural fixings; aluminium profile frame; toughened glass and the ceiling construction.

A two year warranty covers all moving parts, and electrical components.

Future alterations to or reconfiguring of pods:

Any alterations to or movements of pod structures should only be carried out by Boss Design's authorised installers, and following written approval of any proposed changes beforehand.

Changes to any components of the pod structure or to any electrical components and/or wiring made by non-approved installers and without the prior approval of Boss Design will invalidate the warranty in its entirety.

Contact

Spares and accessories may be purchased through the Boss Design customer services department on +44 (0)1384 454709

For all other enquiries please contact your local representative.

Boss Design**Email**

sales@bossdesign.com

Web

www.bossdesign.com

Headquarters**UK**

Boss Drive
Dudley
West Midlands
DY2 8SZ
T: +44 (0)1384 455 570
F: +44 (0)1384 241 628

USA

North American HQ
2014 Chestnut Street
High Point
N.C. 27262
T: +1 844-353-7834
F: +1 336-884-2278

Showrooms**UK**

London Showroom
7 Clerkenwell Road
London
EC1M 5PA
T: +44 (0)20 7253 0364
F: +44 (0)20 7608 0160

USA

Chicago Showroom
Third Floor
310A Merchandise Mart
Chicago
IL 60654
T: +1 844-353-7834

Dubai

Dubai Showroom
Design House
Al Noor Street South Al Sufouh 1
PO Box 117088
Dubai UAE
T: +971 (0)443 788 99

Singapore

Singapore Showroom
33A Tanjong Pagar Road
Singapore
088456
T: +65 8288 9959